


# Registering your switch-accessible software

**1** If you have a USB Switch Box, plug it in (you do not need a box to register your software titles).


Install and run the USBKeys2 software.

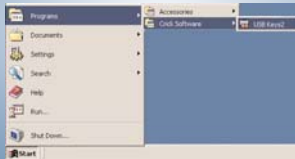


Run your switch-accessible application. **2**




**3** If the USBKeys2 control panel isn't visible, click on the USBKeys2 icon in the taskbar. Click on the button for each of the switch box's sockets to select an action for each switch.

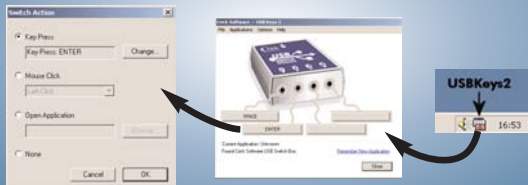


**4** Click 'Remember New Application' to store this information in the database.

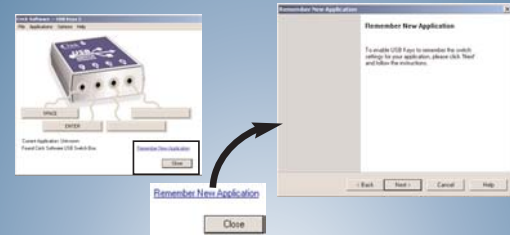


Click 'Next' to see a list of the applications you have open. Select your application from the list and click 'Next'.

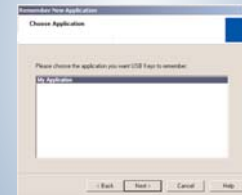

Enter the application's name and publisher and click 'Next'.

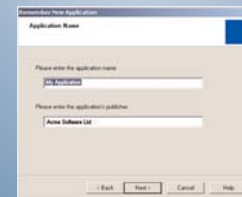


Enter the application's name as it appears in its title bar (not including any filename) and click 'Next'.

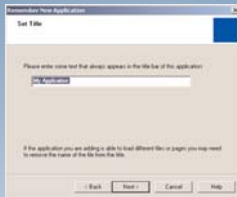

Click 'Next' to confirm the switch presses you've set up.




In the Notes, include information about alternative setups or other useful information for users. Enter your company name as the information provider, then click 'Next'.

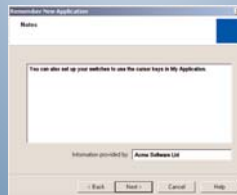

5

Click 'Finish' and repeat steps 2 to 4 for all your switch-accessible applications.

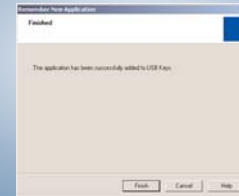

If you want to edit any information, open the 'Applications' menu and select 'Edit Applications'.

6



7

When you've stored all your information in the database, open the 'File' menu and select 'Export Database'.

Save the file on your desktop, then attach this database to an email and send it to us: [support@cricksoft.com](mailto:support@cricksoft.com)



Thanks for registering!